

TABLE 1: LED JUMPER SETTINGS

REMOVE SCREW & COVER TO ACCESS

SETTING THE RELAY CONTROLLED LED COLOR - J1 AND J3

	JUMPER J1	JUMPER J3	IDLE	ACTIVE	
	*NO JUMPER	CONNECT 1-2	OFF	GREEN	
	*NO JUMPER	CONNECT 2-3	GREEN	OFF	
	CONNECT 1-2	*NO JUMPER	OFF	RED	
	CONNECT 1-2	CONNECT 2-3	GREEN	RED	
DEFAULT	CONNECT 2-3	*NO JUMPER	RED	OFF	
	CONNECT 2-3	CONNECT 1-2	RED	GREEN	
	NO JUMPER	NO JUMPER	OFF	OFF	



JUMPER J2 SETTINGS
PINS 1 & 2 = TOGGLE

 
PINS 2 & 3 = TIME DELAY

GROUND CENTER PIN (2) OF J1 FOR RED

. .

GROUND CENTER PIN (2) OF J3 FOR GREEN

REMOTE ACTIVATION OF LED - OVERRIDES SWITCH ACTION



REV E	4-4-19	TABLE	1 ADDED	ND	JUMPER	BOTTOM	LINE	FOR	ND	LED

REV F 2-10-22 REMOTE ACTIVATION OF LED TEXT CLARIFICATION
REV G 11-21-22 REVISED CURRENT DRAW REMOVED YELLOW LED

PAGE 1 DF 1

DATE: BY: 11/21/2022 JFH

5277-B SERIES PIEZO SWITCH
MOUNTING DIMENSIONS & SETTINGS

MOUNT WITH 2 SCREWS PROVIDED TO SINGLE GANG. UL LISTED/RECOGNIZED ELECTRICAL BACK-BOX.

